
How to install your shutters

Panels arrive built. Frames come in pieces for you to fit.


1. Before you start

Check the panels and parts against the packing list. Match the labels to each window. Report any damage within 48 hours with photos.

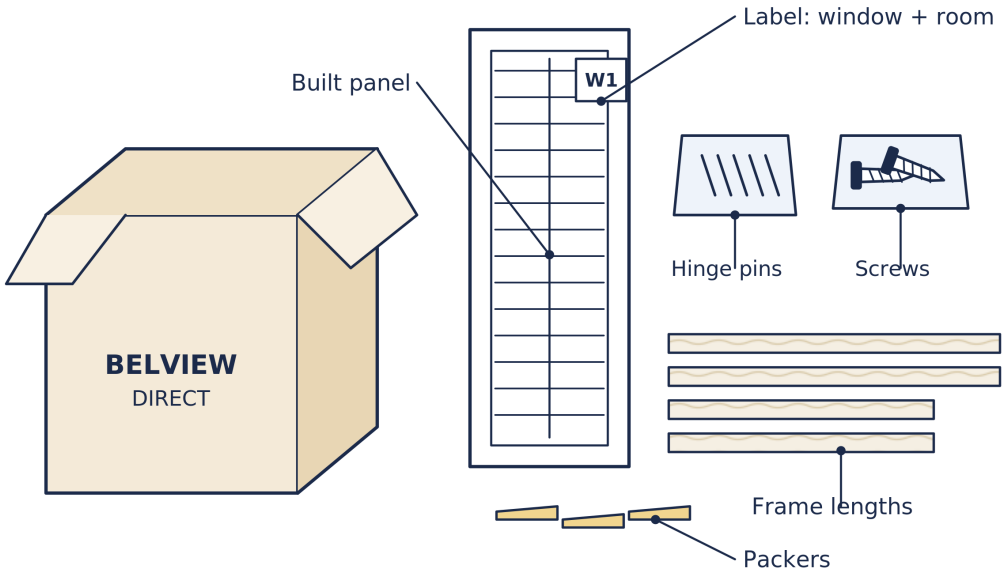

2. Tools


Drill, bits suited to timber or masonry, level, tape, screwdriver, pencil, packers, silicone.

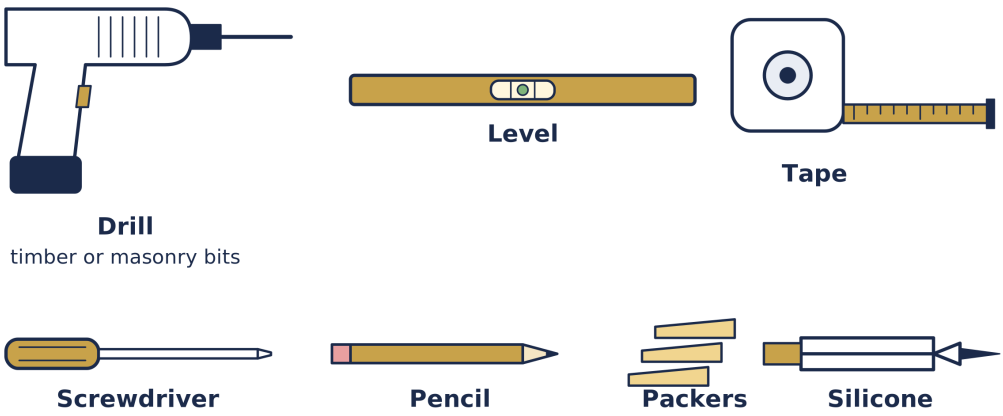

Have everything within reach before you start


3. Inside mount, L frame

Dry-fit the frame in the reveal. Pack it level and square — diagonals within 3 mm. Pre-drill and screw through the frame into the reveal. Do not overtighten.

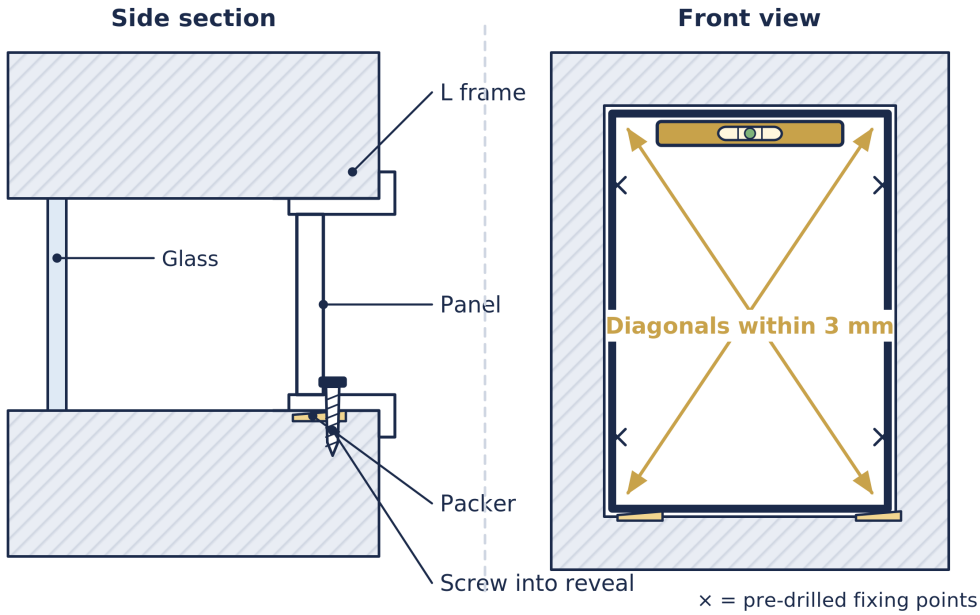


4. Inside mount, Z frame

A Z frame also sits inside the recess, with its lip over the front edge of the reveal. Pack it level and square, pre-drill, and screw through the frame into the reveal. Face fit (on the wall or architrave) is a separate option.

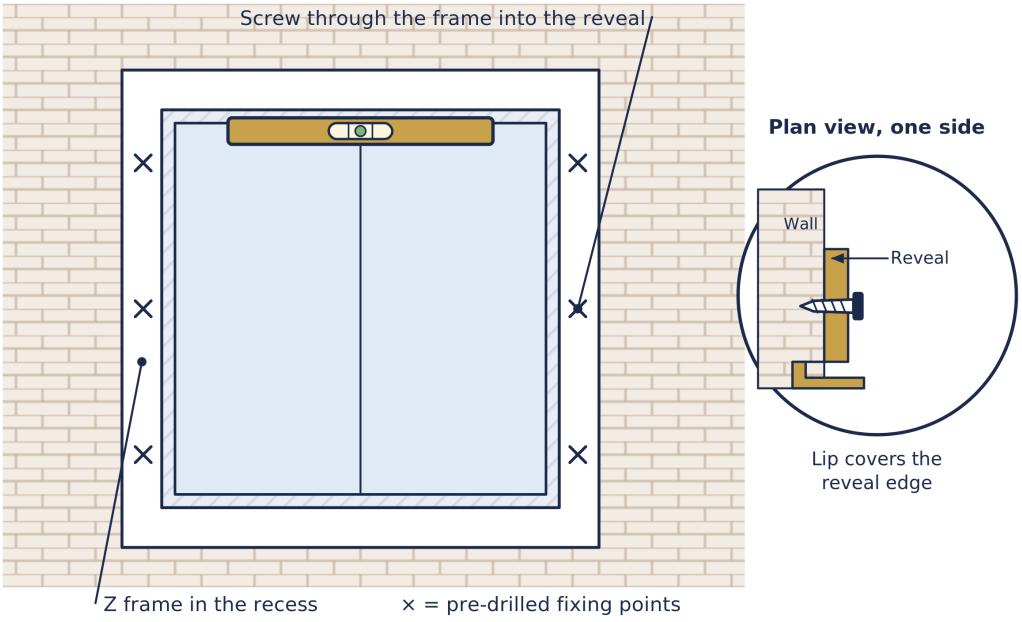


5. Hang the panels

Drop the hinge pins in. Adjust them so the gaps are even. Check the panels close flush.

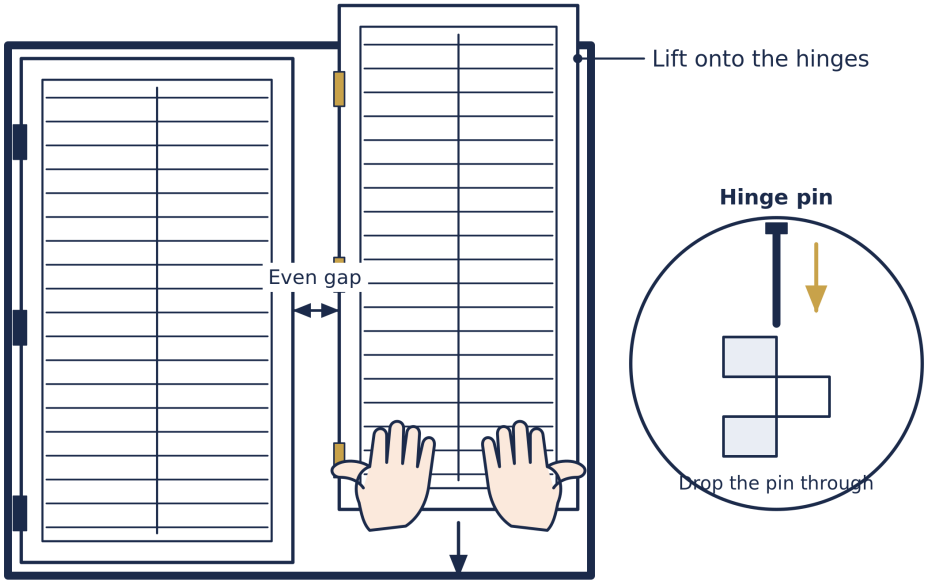


6. T-posts and multi-panel layouts

Fit the T-posts and line up the mid-rails across the panels.

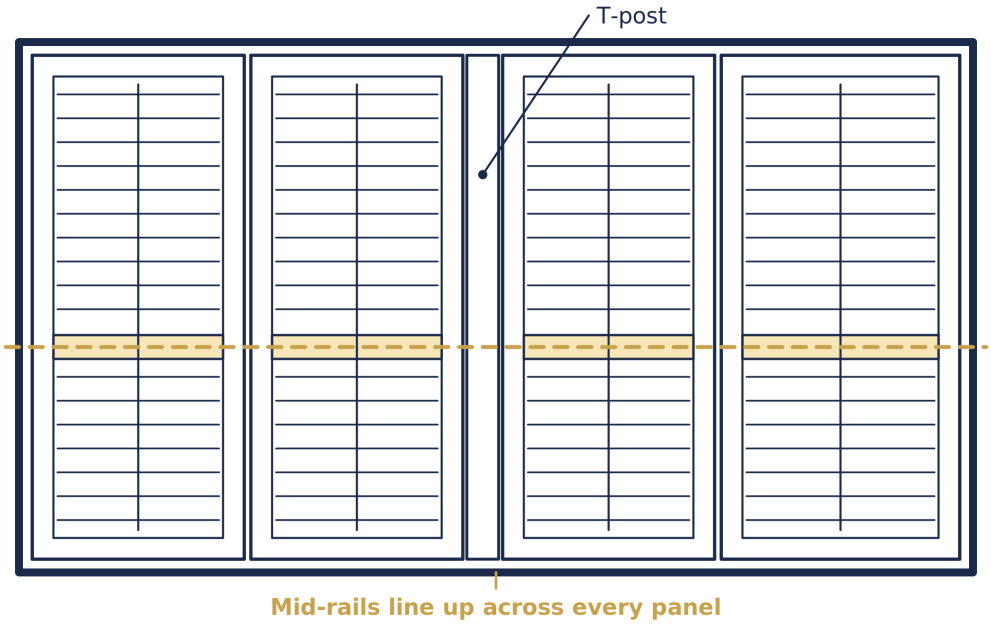

7. Adjusting


Check louvre tension. Fit magnets and catches. Rehang a panel if the gaps are uneven.

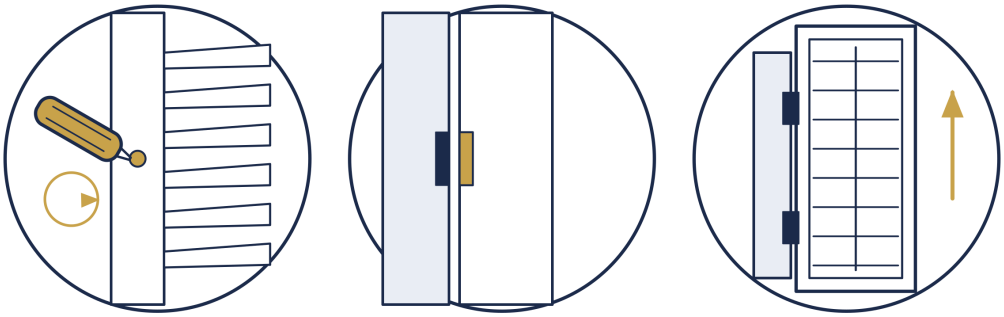

Louvre tension | Magnet catch | Lift off to rehang


8. Finishing

Fill the screw holes. Run a silicone bead if needed. Clean the louvres.

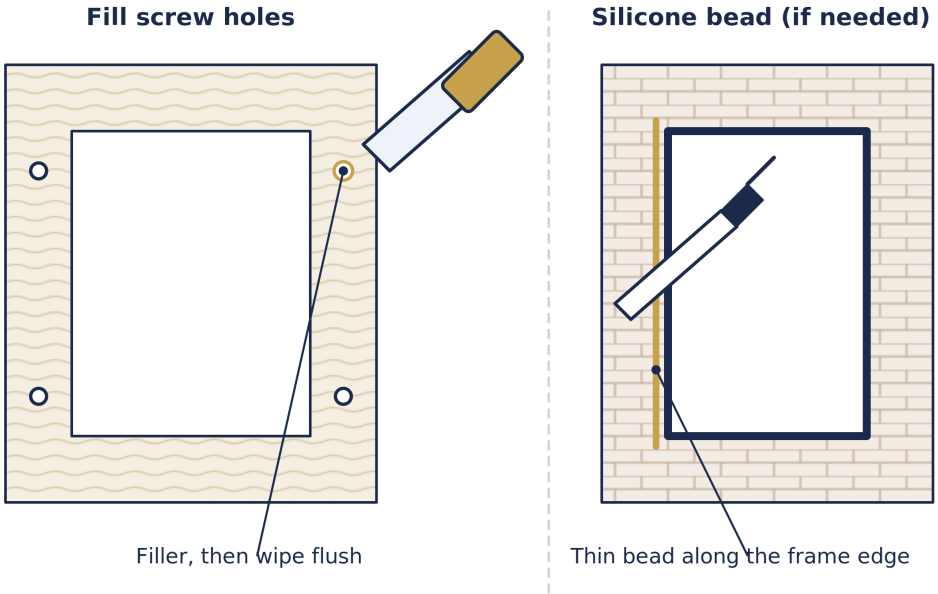

9. Troubleshooting

Panel rubbing — check the frame is square. Gaps uneven — adjust the hinge screws. Louvres loose — tighten the tilt tension. Out-of-square window — pack the frame until diagonals match.

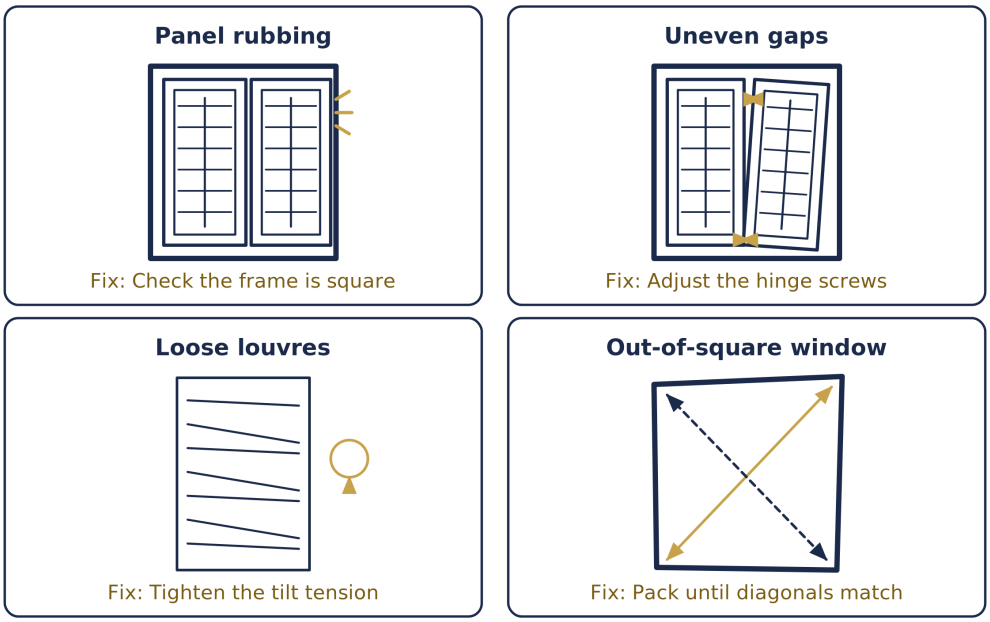

10. Care and warranty

Clean with a damp cloth. Maximum panel width is 850 mm. Drops over 3000 mm are custom with no warranty. Contact hello@belview.au or 02 9069 1823.

